


3-in-1 Travel Tender Portable Crib and Playpen with Bassinet

Instructions

IMPORTANT: Please read these instructions carefully and keep them for future reference.

PARTS:

Part	Quantity
Plastic connector	1
Side rail tube w/reduced end	2
Side rail tube, straight	2
Foot assembly	4
Upright (longest) tube	4
End rail tube (curved)	2
Large fabric (w/mesh panels)	1
Bassinet fabric (smaller)	1
Floor-pad	1
Sheet	1
Storage Bag	1
Hardboards	4

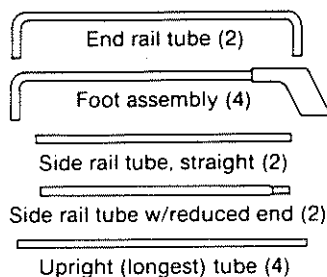

WARNING

- The **3-in-1 Travel Tender**, including hardboard and side rails, must be fully erected prior to use. Using the Travel Tender without properly inserting the side rails may result in the child falling out of the Travel Tender.
- The four (4) hardboards must be inserted in the Large Fabric (w/meshed panels) prior to the use of this product as a Playpen/Portable Crib.
- Never leave your child unattended.
- Many crib or playpen toys cannot be properly attached to this product. To prevent possible entanglement injury, NEVER add strings, cords, etc., to fasten toys or other articles to this product.
- Do not add padding or objects inside the 3-in-1 Travel Tender which will permit your child to climb out; do not place cords, straps, or similar items that could become wound around the child's neck in or near the product.
- The Playpen/Portable Crib is intended for use by a child who is unable to climb out of the Travel Tender, and is less than 86 cm (34 in) tall and weighs less than 13.6 kg (30 lbs).

WARNING


- To prevent falls, do not use Bassinet when child is able to push up on hands and knees.
- The **Bassinet**, including Travel Tender side rails and plastic clips and Hardboards must be fully erected prior to use.
- The four (4) hardboards must be inserted in the Bassinet fabric prior to the use of this product as a Bassinet.
- Before each use or assembly, inspect Travel Tender or Bassinet for damage such as fabric tears, damaged hardware, loose joints, missing parts or sharp edges. DO NOT use Travel Tender or Bassinet if any parts are missing or broken. Contact Fisher-Price for replacement parts and instructional literature if needed. DO NOT substitute parts.
- Use only with pad provided.

ASSEMBLY OF THE 3-in-1 TRAVEL TENDER

I. Assembly Hardboards

A. Bassinet Use:

Turn the Bassinet fabric inside out. Insert the hardboard floor panels into fabric pockets smooth side up, as shown in Fig. 1. Return the body right side out.

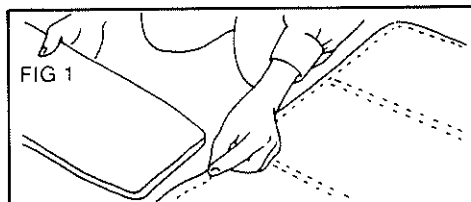

B. Playpen/Portable Crib Use:

Turn the fabric w/meshed panels inside out. Insert the hardboard floor panels into fabric pockets, smooth side up, as shown in Fig. 1. Return the body right side out.


II. Form Tubular Frame

NOTE: Set aside the 4 side rail tubes for later assembly.

1. Insert each of the four **foot assemblies** into the center plastic connector. Make sure each foot assembly is seated completely down in the connector.

Test by trying to swing each foot assembly sideways; they should not swing more than 3 to 4 inches. The 4 foot assemblies should form an elongated X. FIG 2

NOTE: When finished with Step 1, connector should be 1/2" - 5/8" off the ground.

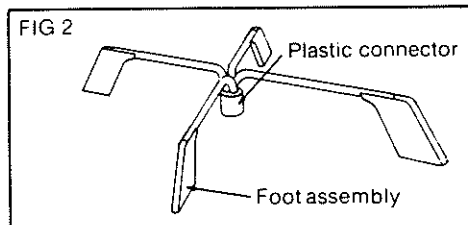

2. With the reduced (smaller) ends **up**, fully insert the 4 upright (longest) tubes **straight down** into the holes in the plastic feet of the 4 foot assemblies.

3. Join 2 upright tubes with an end rail tube at each end of the "X" formed by the foot assemblies. Repeat.


Tubular frame is now complete.

III. Add Fabric

NOTE: Hardboard Floor Panels must be assembled correctly for intended use. Refer to Section I.

1. Place the large fabric piece over the frame.

2. Slide one end pocket **only** about 6 inches over the end rail. FIG 3

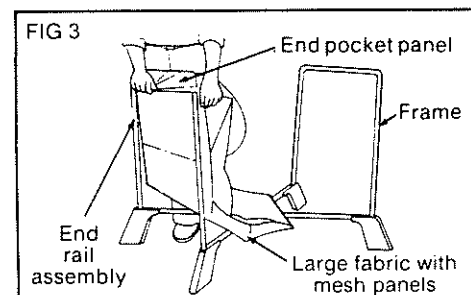


3. Slide the opposite end pocket over the opposite end rail.

4. Pull fabric completely down. FIG 4



STORAGE

To Pack in Storage Bag:

1. Take apart Bassinet and 3-in-1 Travel Tender.
2. Insert the hardboards and the Large Fabric into the bag. If the product was used as a Bassinet remove the Hardboards from the Bassinet fabric and load the Hardboards as shown in Fig A. If the product was used as a Playpen/Portable Crib the Hardboards may be left in the fabric, Fig B.

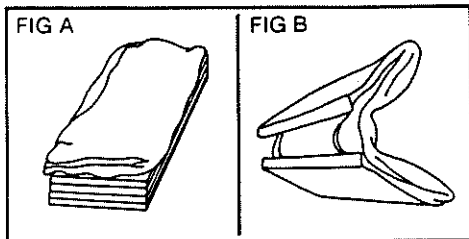

3. Combine the foot assemblies into pairs so that the open metal end of the one tube is inserted into the bottom of the plastic foot of the other tube. Insert one end of a end rail into the opening at the top of one plastic foot and the other end into the bottom of the other plastic foot in the pair.

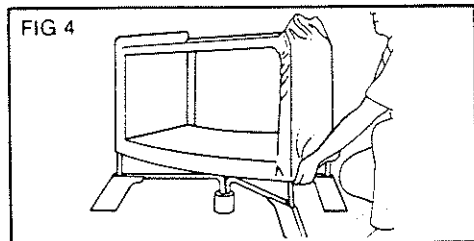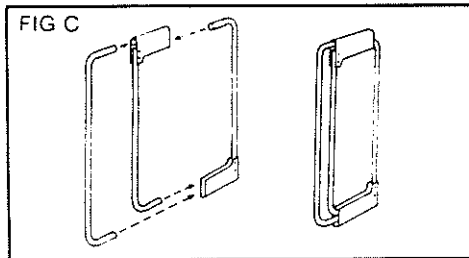

5. Using 2 of the remaining short tubes, insert a tube with reduced end into a straight tube to form 1 side rail. Repeat to form a second side rail.


IMPORTANT: Twist the two tubes that form the side rail snugly together by hand. **Do not tap ends on the floor as this will overtighten them.**

Insert side rails.


7. Undo the hook-and-loop-fastener strap from the plastic loop to open the rail tunnel along one side. FIG 5
8. Slide one side rail assembly fully into the rail tunnel, making sure it goes completely inside the tunnel. (Push the rail end toward the inside of the 3-in-1 Travel Tender to make this step easier.)
9. Slip the hook-and-loop-fastener strap through the plastic loop and secure the strap to itself.
10. Repeat for the opposite side.

4. Fold the Bassinet fabric:

- a) Fold the ends in toward the center, so the plastic clips are at each end.
- b) Roll up the Bassinet fabric starting at one of the clip ends.

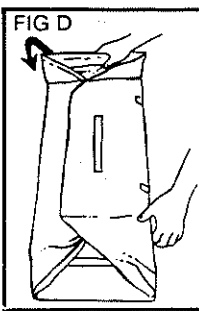

5. Roll the eight (8) remaining tubes in the Pad (w/sheet) and load these parts, the Bassinet Fabric and the Plastic Connector into the bag as shown in Fig E.

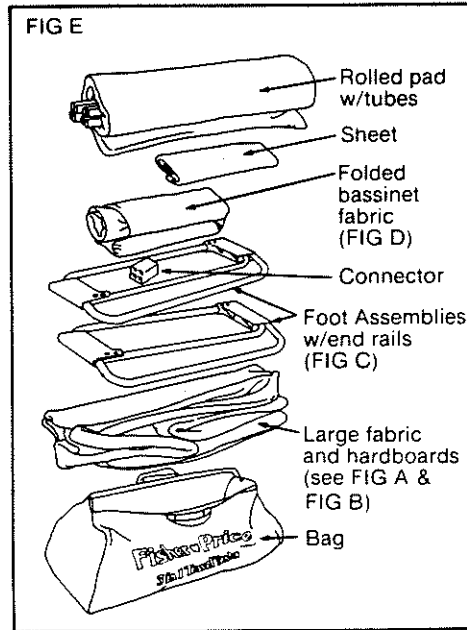

CARE INSTRUCTIONS

Fabrics — Surface washable. Use mild detergent, air dry, no bleach.

Sheet — Machine washable. Use warm water, tumble dry warm, remove promptly, no bleach.

Floor-pad — Surface washable. Use mild detergent, air dry, no bleach.

Bag — Surface washable. Use mild detergent, air dry, no bleach. Do not dry clean.

If you have any problems with this product, please call Fisher-Price Consumer Affairs at 1-716-652-8402 (sorry, no collect calls) between 8 AM and 5 PM Eastern time, Monday through Friday, or write to:

Fisher-Price
Attn: Consumer Affairs
636 Girard Ave.
East Aurora, NY 14052


Fisher-Price Canada
Attn: Consumer Affairs
5300 Tomken Rd.
Mississauga, Ontario
L4W1P2

Sewn Assemblies Made in Mexico.
Frame Assembly Made in U.S.A.

This product conforms to all applicable regulations promulgated by U. S. Consumer Products Safety Commission.

© 1989 Fisher-Price
Division of The Quaker Oats Company
East Aurora, New York 14052

Printed in U.S.A. #2 9132

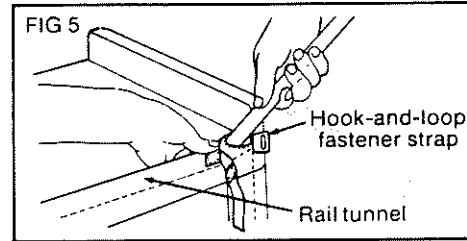

A. For Playpen/Portable Crib Use:


1. Add the crib sheet to the floor-pad (if desired), and place inside play area.

Travel Tender is now ready to use as a Playpen/Portable Crib.

B. For Bassinet Use:


NOTE: Hardboard Floor panels must be assembled into the Bassinet Fabric. Refer to Section I.

2. Drape fabric end pocket or Bassinet fabric over one end rail of the 3-in-1 Travel Tender. FIG 6

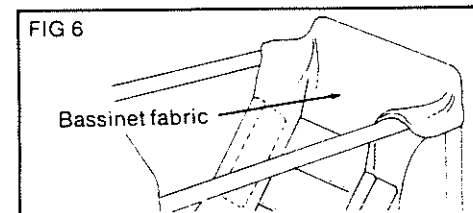


3. Drape sides of fabric over side rails, making sure the plastic clips are firmly placed on the side rails. FIG 7

4. Drape opposite fabric end pocket over the opposite end rail.

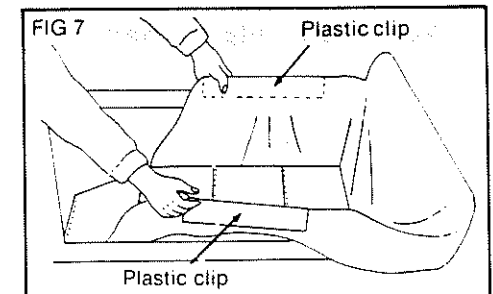

5. Pull Bassinet fabric firmly down into place.

6. Place floor-pad in the Bassinet. FIG 8

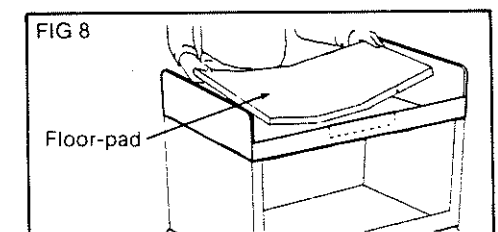

Travel Tender is now ready to use as a Bassinet.