 


CAM340 Quick Start Guide

Package Contents



CAM340	Power Adapter (for USB 2.0)	6' USB type-A cable
--------	--------------------------------	---------------------



USB type-A to type-C adapter	Quick Start Guide
------------------------------	-------------------




Overview

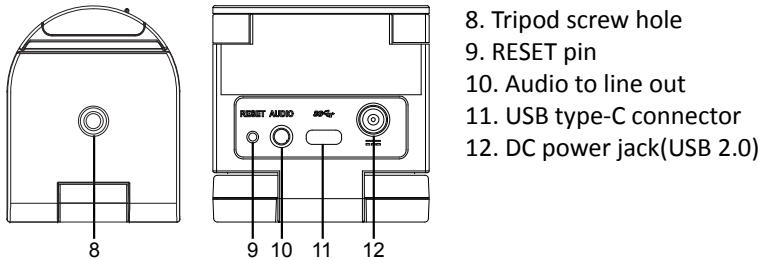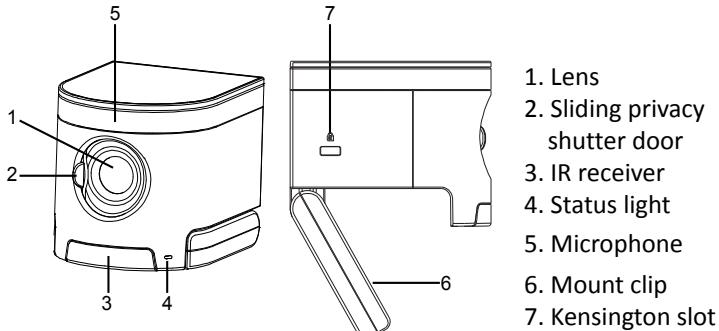


Setup CAM340

1. Install the CAM340 on top of TV or on a tripod.

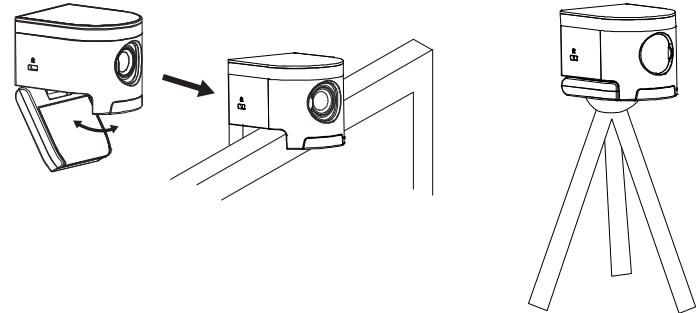


2. Connect CAM340 to PC with provided USB cable. If you like to use type-C connector on newer PC, connect provided adapter to type-A end of cable, then connect type-C side of adapter to PC.

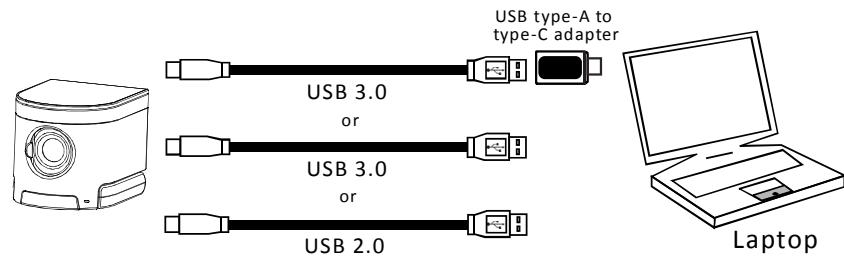


- If you connect CAM340 to USB2.0 port on PC, status light will blink blue and PC displays the warning message. Please connect provided power adapter to CAM340 and wall.

[Note] USB 2.0 warning only stays on for 2 minutes then disappears.

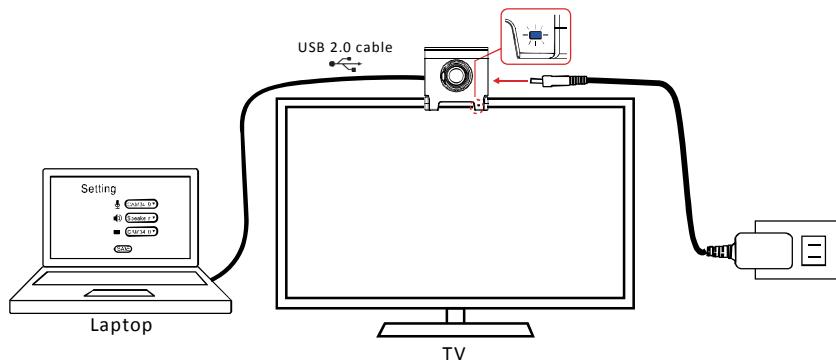

- Select CAM340 as the camera or video device in your app. If you want to use CAM340 microphone, select CAM340 as your microphone or audio device too.

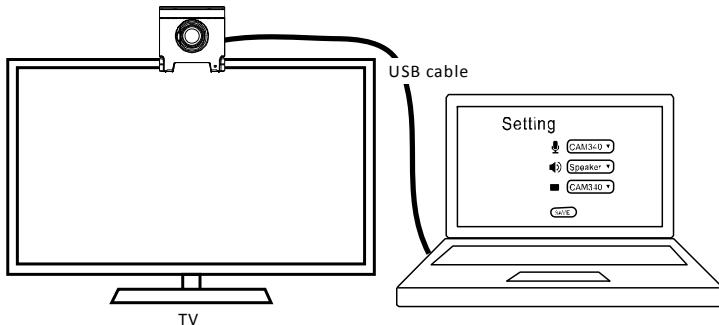

- For advanced setting and firmware update, please download AVer PTZApp from <http://www.averusa.com/video-collaboration/support/downloads.asp>

[Note] In AVer PTZApp, please select the USB Data Transfer Mode (Settings) as:

- ✓ For **Mac OS: isochronous mode**
- ✓ For **Windows: Bulk mode**

Quick Reference

■ Status LED

LED	Status
Blinking blue	<ul style="list-style-type: none"> - Power on start-up usually takes less than 30 seconds - Connecting to PC USB 2.0 port without connecting power adaptor
Solid blue	Camera is power on
Amber	Not in use
Blinking green	Firmware updating

Note:

CAM340 is a Plug-n-Play Conference Camera. The system requires no special drivers. Please visit [averusa.com/video-collaboration](http://www.averusa.com/video-collaboration) for more information.